

double roller blinds

**We urge you to read these measuring instructions before making your order.
We cannot exchange your order or refund you for blinds that were not measured correctly.**

- Always use a steel tape measure for all measurements.
- The width is always the first measurement recorded.
- Always measure every window, even if you think the windows are the same. Our blinds are custom made to fit, therefore each window must be measured individually.
- Record all measurements in millimetres.
- Please measure window exactly, as we will make adjustments for brackets.

What is INSIDE MOUNT?

Inside mount refers to a blind that will be installed inside a window frame or encasement, where the window is recessed and the blind will hang inside the window frame/encasement.

What is OUTSIDE MOUNT?

Outside mount refers to blinds that will be installed outside the window frame and overlap the window frame.

Please note outside mount blinds will cover the window and will provide the most light blockage and privacy.

Cheapblinds.com.au will not take any deductions from an outside mount blind. The blind will be manufactured to the exact measurements specified.

There are 3 different applications for double roller blinds

- Both blinds can be back - rolled by this the blinds will sit as close as possible to the window .
- Both blinds can be front rolled.

Note - this is great if inside mounting the blinds and there are obstructions that you need to miss.

also another great feature of front rolling both blinds the front blind acts as a valance which looks very neat.


- You can also have the rear blind back rolled and the front blind front rolled.

Please decide which fabric to have at the front and which to have at the back. In most cases the sunscreen is at the rear but don't forget if outside mounting for better room darkening and privacy you would be better off to have the blackout blind as your rear blind.

How to measure INSIDE MOUNT?

To fit inside the window recess;

- Measure the exact width inside from left to right of the window recess at the top (A),
- THIS IS THE WIDTH YOU WILL ORDER.

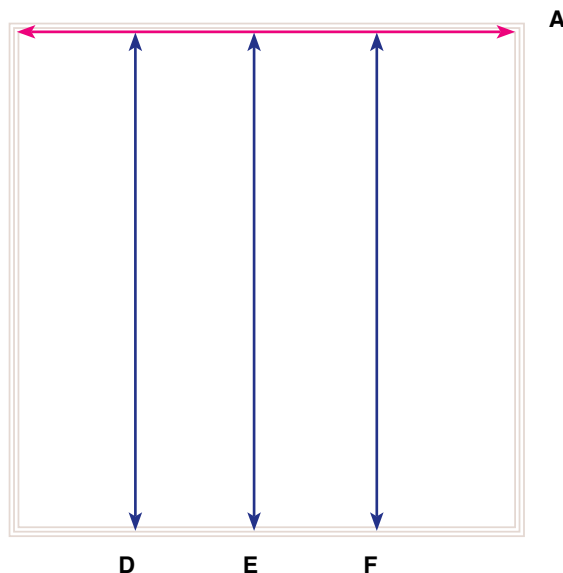

Inside Mount -

You require at least 120mm of clear depth in the window frame to have the blinds sitting flush in the window frame.

If you are happy with the front blind sitting forward of the window frame you only require as little as 60mm clearance in the window frame.


Please do not forget to look for any handles, knobs, door handles, window frames or window winders that could obstruct the blinds.

Width measurement - you only require to measure the top inside measurement from the left to right of inside window frame, as this is where the brackets will be mounted for installation.

Height measurement - you need to measure the height on either side of your window and record the largest measurement.

How to measure OUTSIDE MOUNT?

- Measure the width you require from side to side of the window at **top (A)**,
- Measure the height you require from bottom to top of the window at **left (D)**, **middle (E)** and **right (F)**.
Then record the longest of the lengths on the form.

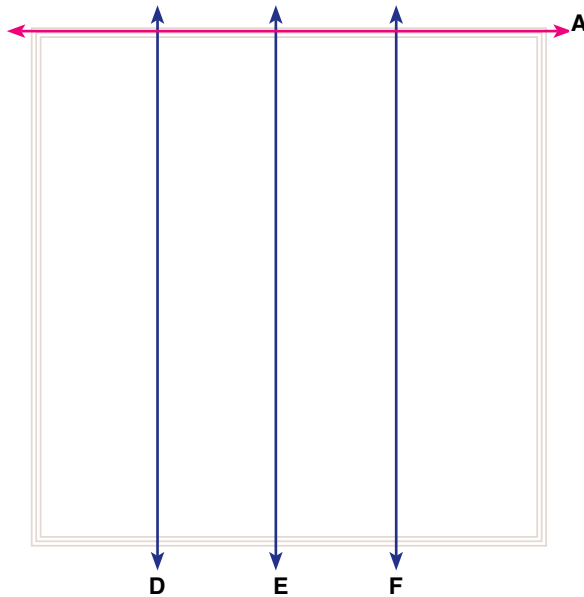**Outside Mount**

Width measurement - Please measure from the top left edge of the architrave to the top right edge of the architrave.

As this is where you will install the brackets this is the only width measurement you will require to record.

Height measurement – you need to measure the height measurement in three places **left (D)** **middle (E)** and **right (F)** and record the longest measurement.

Handy Hint – it is a good idea to keep an eye out for doors abutting the window eg a wardrobe door next to the window. Is there enough room to have the blinds outside mounted and to also open the door?
Do not forget that the blinds will be protruding up to 120mm past the window.